

METRO DISTRICTS

Fire Place

The fire place remote is to the left of the fire place attached to the wall.

To turn on the fireplace: Leave remote in place.

1. Touch the red power button once to get the remote out of sleep mode.
2. Once the remote is out of sleep mode: Push the power button once, the fire place will start in less than 1 minute.

Remember to turn off the fire place when you leave.

1. If needed, touch the red power button once to get the remote out of sleep mode.
2. Turn off the fire place hit the button once.

Note:

If you hit the power button more than three (3) times in a row within a thirty (30) second period, the remote will go into lock down and it will not start.

If the remote goes into lock down let the District office know and we will re-set the control on the fire place on the next business day.

Fire Pit

To turn on the fire pit.

1. The timer for the Fire pit is just a few feet north of the concession stand window inside the plastic box attached to the wall. Lift the plastic cover upwards to get access to the timer.
2. Turn the timer on passed the ten (10) minute mark on the timer or to the time that you want.

Do not touch the gas value in fire pit.

To turn off the fire pit:

Fire Pit will shut off automatically when timer runs out, or turn timer to off.

Do not touch the gas value in fire pit.

Any questions or problems please contact the Metro Districts.